


CUT SHEET FROM WALLS
TO FORM C-3 JOINT
TRIM BACK TEES AS REQ'D

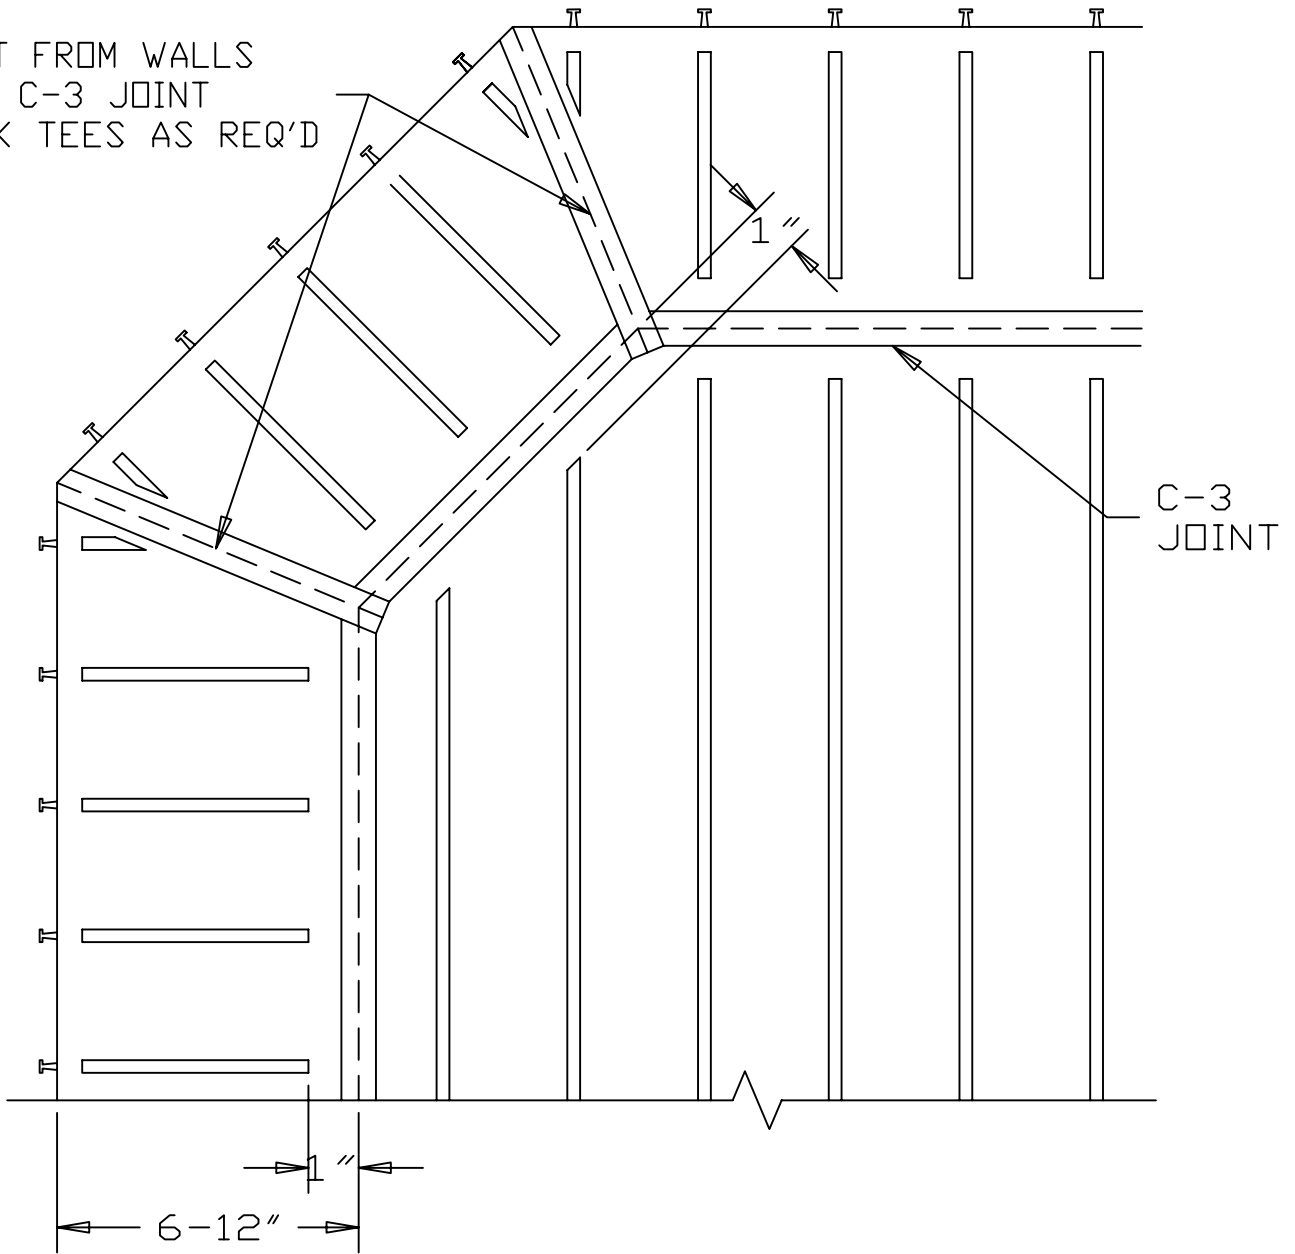

- NOTES: (1) PLACE NAILS WITHIN $\frac{1}{8}$ " OF SHEET EDGES. \triangle
 (2) FOR JOINT WELD SEE DETAIL PLD-TL-010

Ameron PROTECTIVE LINING DIVISION

SPECIAL T-LOCK CORNER DETAIL

DRAWN P.K. 7-86

PLD-TL-071

REV

\triangle NOTE #1, 1/8 WAS 1/4

APPV'D

A